

centor ARCHITECTURAL

S1 Screen

Distributed by:



LACANTINA DOORS




S1 Kit



Initial Unpacking



Package 1 of 2

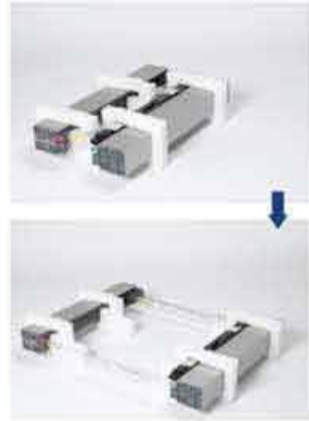


Ensure jamb tongues are facing each other



Package 2 of 2




Attach Head (1 + 2)

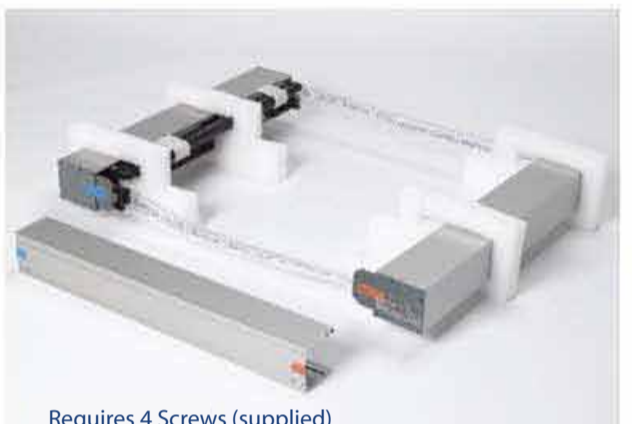


Requires 4 Screws (supplied)



Attach Head (2 + 3)

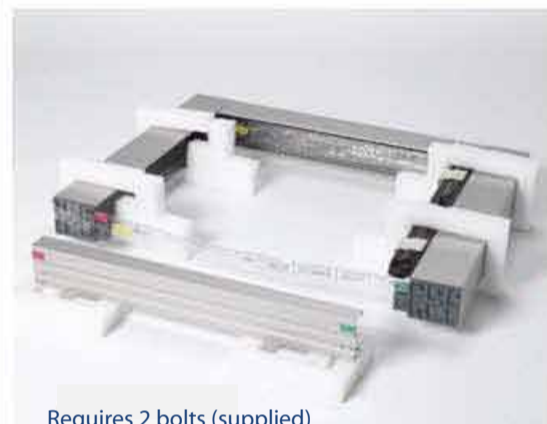

Requires 2 bolts (supplied)

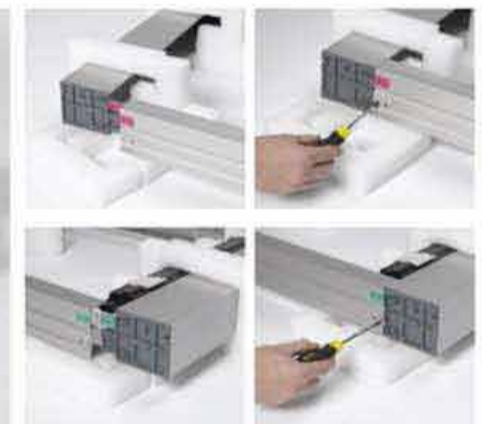

Square Up Frame In Opening



Apply Tension (5)



Move top and bottom springs to hook over yellow posts for pre-tension

Remove Final Packaging (6 + 7)



Cable Sheath



Screen Clips



Foam Blocks

Separate Screen

Ensure wheel at top of stile is hung on the track



Operate screen three times




Lateral Adjustment



Turn adjustment screw to align stile with jamb. Operate three times after adjusting to check alignment

Fitting Covers

Sill Cover (8)

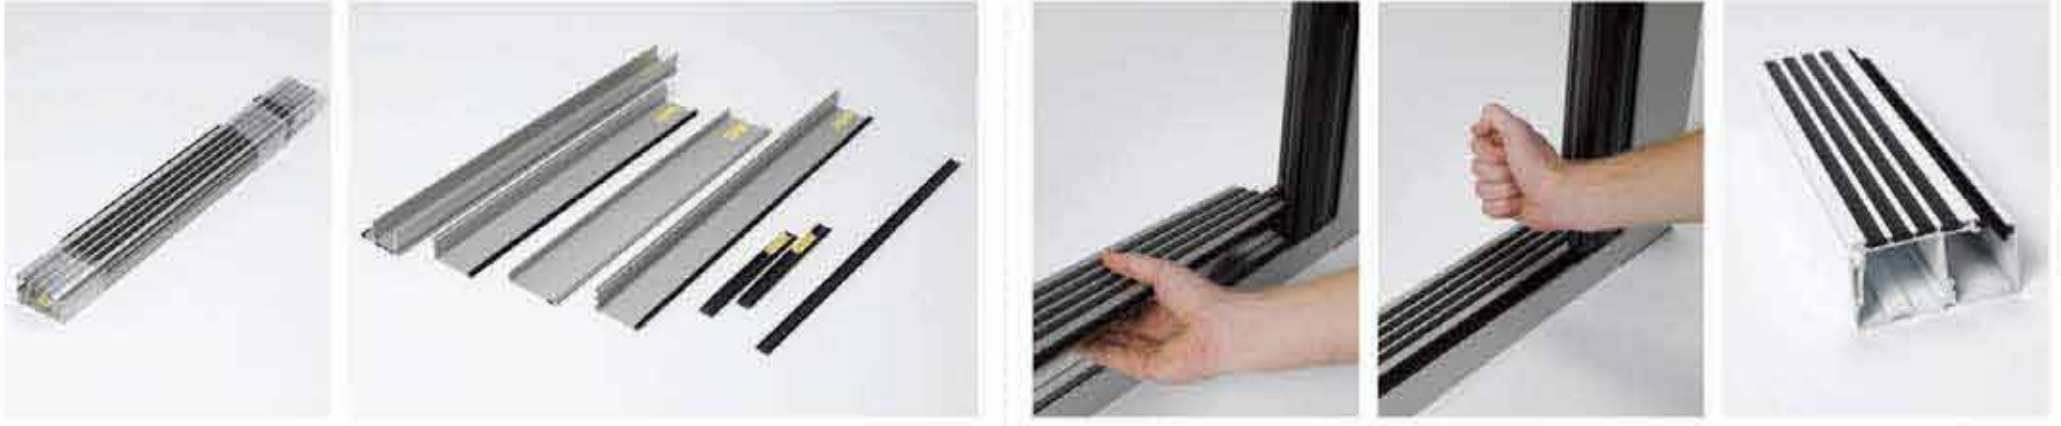

JambCovers (9)



Head Covers (10)



Stile Covers (11)



Fixing of screen stop.
For double units only